

Installation Instructions

Jackson Stoneworks Granite Vanity Top **SOS Selling Center** **321 POD Display Panel**

You Will Need:

Phillips Head Screwdriver



Locate **Jackson Stoneworks Vanity Top Product Display Board**





Identify **“Tear Pad”** to be removed



1. Remove both screws from product display board and remove Tearpad




2. Assemble plastic literature box according to enclosed **Assembly Instructions** and attach to Jackson Stoneworks product display board using the double sided tape.

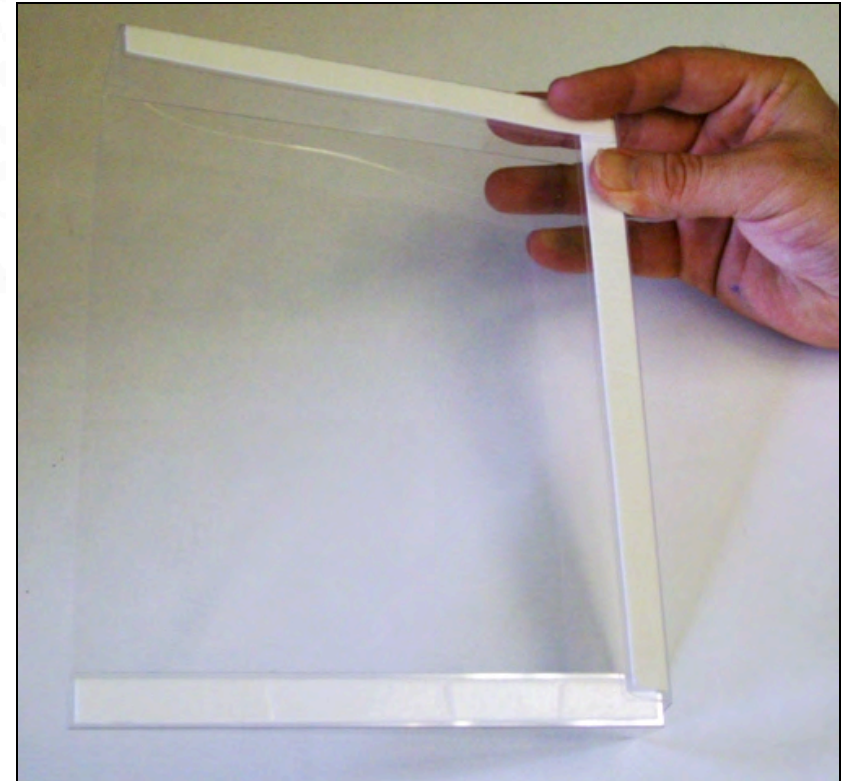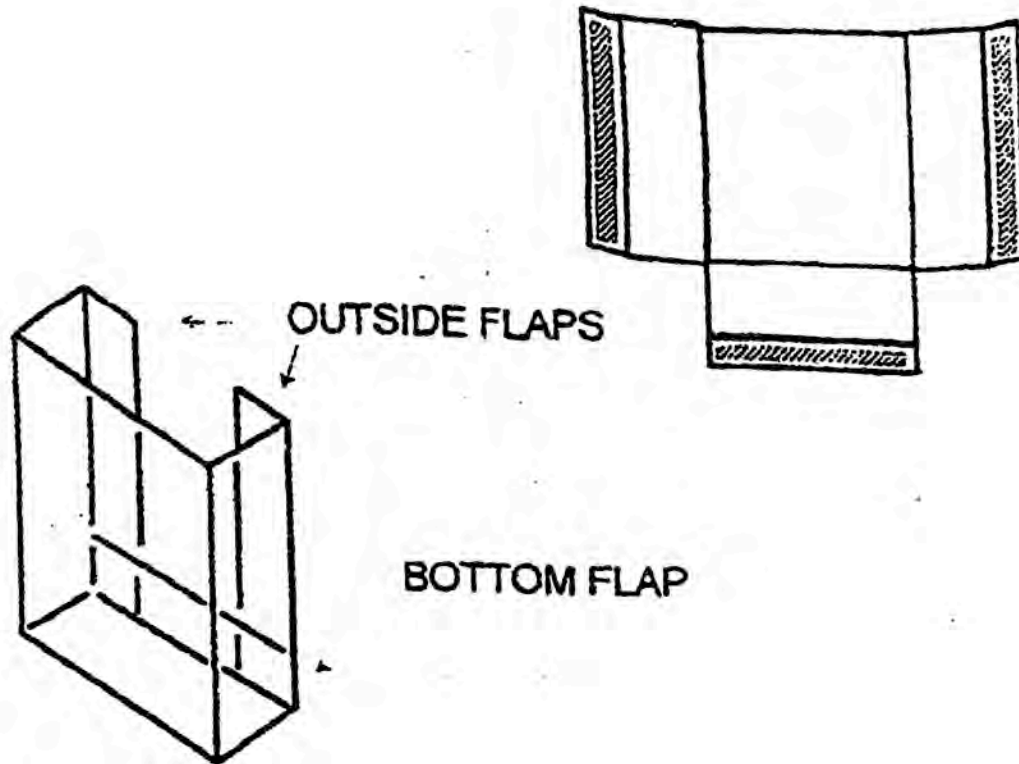

(See enclosed Literature Box Assembly Instruction Sheet for details)

3. Attached fully assembled literature box to the display board using the double sided tape (provided in the kit) in the same location from which you removed the Tearpad in Step 3

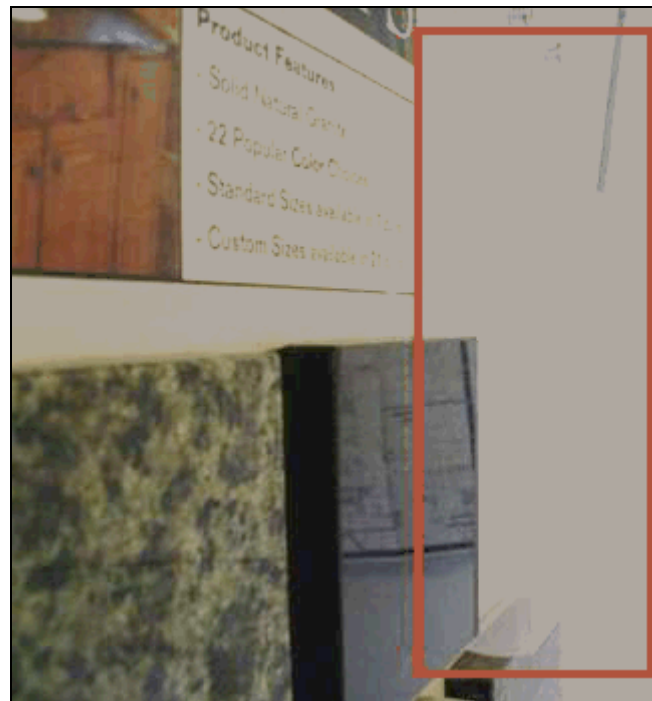

4. Remove brochures from shrink wrap packet and UNFOLD the brochures



5. Insert UNFOLDED brochures into literature box

